

INSTRUCTION MANUAL



1. Use a flat head screw driver and get its blade in the middle of the notches. Push in toward the center.



2. When the detachable Activity Park starts to move slightly, pull it out.



3. Assemble another game as shown. Make sure the notches form a catch the clicks onto the baby activity center.